

VIII.3.3-RES-SNGL-S-EVAA26 SUBROUTINE EVAA26

Description

Subroutine EVAA26 is a utility subroutine used for induced surcharge evacuation options 1, 2, 3, 4, 5, 6, 9 and 10.

Calling Sequence

CALL EVAA26 (EVACEL,GATE,EVACQ,STOR,ELEV)

Argument List

The variables in the argument list are defined in the documentation for subroutine NDUC26.